



Full Length Regency Cresting Shown

Partial Cresting Shown

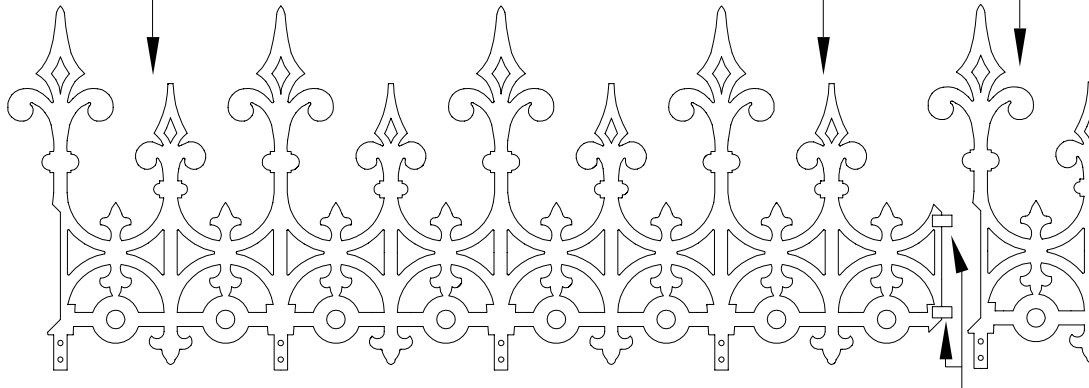

PRE-ASSEMBLY

← Tabs are factory welded on front and back of cresting panels. They simply slide around the next piece to secure crestings to each other.

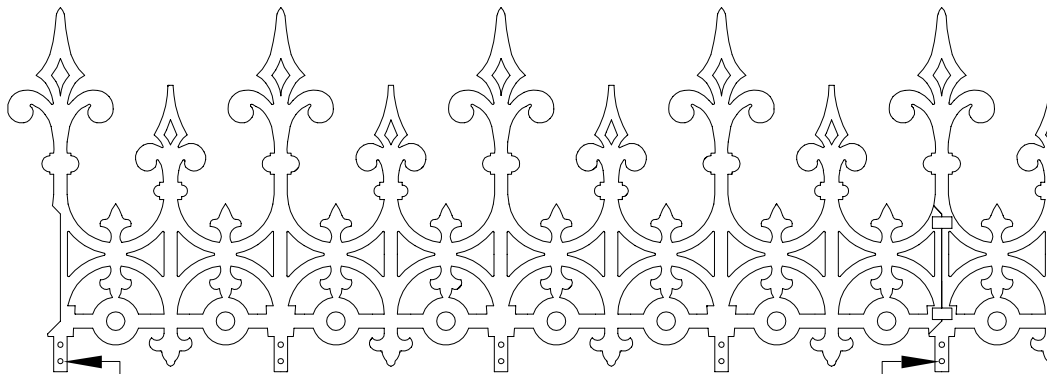

Note: The number of tabs per cresting varies depending on cresting style and height. There are usually one or two tabs per cresting.

ASSEMBLED

← Holes shown are for appropriate mounting brackets. Flat roof and standard angle roof brackets are included at no extra charge.

CAUTION:

Work on top of a roof requires extreme caution. If you are not qualified to do this installation, we recommend that you consult a professional builder.

THIS DRAWING IS NOT DRAWN TO SCALE
Copyright 2003, 2007 Architectural Iron Company, Inc. All rights reserved.

THIS DRAWING IS AN INSTRUMENT OF PROFESSIONAL SERVICE AND SHALL REMAIN THE PROPERTY OF ARCHITECTURAL IRON COMPANY WHETHER THE PROJECT FOR WHICH IT IS PREPARED IS EXECUTED OR NOT. NO CHANGES, ALTERATIONS, ADDITIONS, OR DELETIONS MAY BE MADE EXCEPT BY ARCHITECTURAL IRON COMPANY. THIS DRAWING SHALL NOT BE REPRODUCED BY ANYONE ON OTHER PROJECTS, FOR ADDITIONS TO THIS PROJECT, OR FOR COMPLETION OF THIS PROJECT BY OTHERS WITHOUT WRITTEN CONSENT.

This drawing is available in AutoCad format.

Material used is ASTM A36 mild steel unless otherwise specified.

Due to the manufacturing process actual measurements may vary slightly.



Architectural Iron Company

104 Ironwood Court / P.O. Box 126
Milford, PA 18337

800-442-IRON/4766

Fax: 570-296-IRON/4766

www.architecturaliron.com

E-mail: info@architecturaliron.com

CRESTING TAB MOUNTING DETAILS

Drawing No.	Drafted By:	Checked By:	Date:	Part Number
CTMD-01	J. Wall	D.Q.	07/08/03	CTMD-01