




INSTALLATION INSTRUCTIONS

For Roof-Mounted Finial Bracket

TOOLS NEEDED

1. Silicon Caulk
2. Drill & 3/32" Drill Bit
3. Phillips Head Screwdriver
4. Adjustable Wrench
5. Small Level
6. Marker or Awl

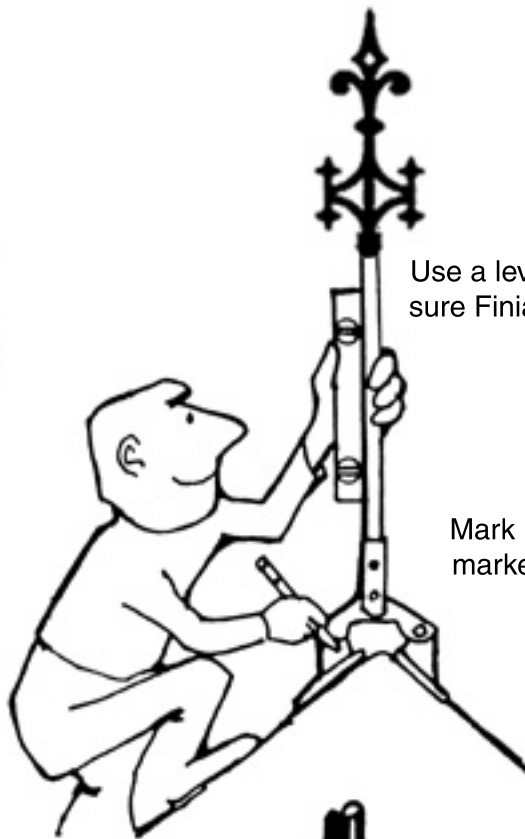


Use a level to make sure Finial is plumb.


Mark holes with a marker or an awl.

Check rod for plumb (use level).
Drill 3/32" holes using roof mount as a template. Fill holes with caulk and drive in 2 1/2" screws supplied.

Insert and Align Finial, then Tighten Screws.

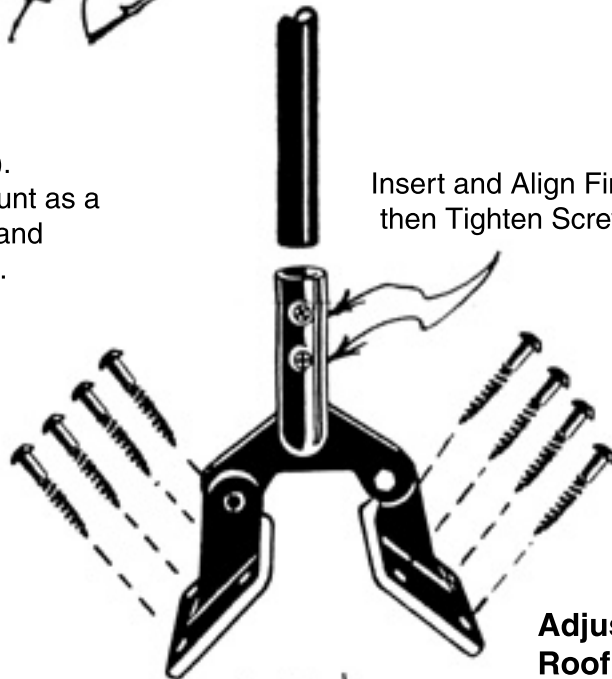

Adjusted to
Roof Pitch

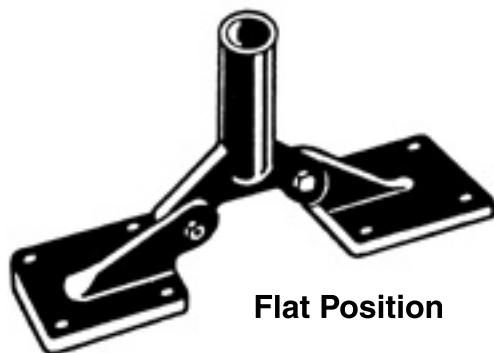

Flat Position



Caution:

Work on top of a roof requires extreme caution. If you are not qualified to do this installation, we recommend that you consult a professional builder.

Capital Crestings

Manufactured by Architectural Iron Company

104 Ironwood Court / PO Box 126

Milford, Pennsylvania 18337

1-800-442-4766 or 1-570-296-7722

www.CapitalCrestings.com

Email - Info@CapitalCrestings.com